

DataStream™ v6.10.1 Update Checklist

Please be advised that the procedure for updating your Apogee® will vary based on your current version.

Apogee® tools running DataStream™ v6.8 or higher, please click [here](#) for instructions on how to apply the v6.10.1 patch.

Tools that have not yet been updated to at least v6.8, should refer to the following instructions to apply v6.9. Once updated, then click [here](#) for instructions to apply the v6.10.1 patch.

To guarantee a successful update, please refer to the checklist below. Additionally, a video tutorial is available on our [website](#) for your convenience. Please contact our [customer support team](#) for assistance with any questions or concerns.

Before You Begin

- Windows: Download free Win32 Disk Imager software from <https://sourceforge.net/projects/win32diskimager/>
- Mac/Linux: Performed with factory-installed software already present on the computer.

Part 1: Download the DataStream™ v6 Image File

- Navigate to www.costeffectiveequipment.com
- Click the **Support** drop down menu.
- Click the button entitled **Click Here for Information on the Latest Update.**
- Click the button entitled **Download DataStream™ *v6 Update.**

**Exact version named will vary as updates are released.*

Part 2: Extract the DataStream™ v6 Image File

- Navigate to your **Downloads** folder & identify the **DataStream™ image** zip file.
- Right click the zip and select **Extract All.**
- Supply a destination path for the file.
- Click **Extract.**

Part 3: Load Image File to USB

**If using a Mac or Linux, see Appendix A*

- Launch **Win32DiskImager** from your Start Menu. (see topmost item ***Before You Begin***)
- Respond *accordingly* to the **User Account Control** message.

- In **Win32DiskImager** click the file icon and supply the path to the image file.
- Insert a USB drive into your PC, select the appropriate drive from the **Device** dropdown, and then click **Write**.
- Acknowledge the warning regarding risk of writing to a physical device.
- Once complete, click **OK** and then click **Exit** to close the application.
- Open **File Explorer**, identify the drive (now titled **Boot**), right click, and select **Eject**.
- Remove the USB from your PC.

□ Part 4: Apply Update to Apogee™ Equipment

- Log in to the Apogee™ with Admin credentials.
- Click the **About** tab at the top of the screen.
- ***IMPORTANT*** On the **About** screen make a note of the version your equipment is currently running. This information is found in the lower left corner under **DataStream™ System Applications**
 - Tools running **v5** will be displayed in *yyyymmdd* format.

Example:

Firmware	20220721090612
Web UI	20220727213957
Diego	20220526134543
Manny	20160404142354
Postal	20160404142634

- Tools running **v6** will be displayed in *v6.x.x* format.

Example:

Firmware	v6.1.0
Web UI	v6.1.0
Diego	v6.1.0
Manny	v6.0.0
Postal	v6.0.0

- Click the **Software Update** button at the bottom of the screen.
- Insert the USB Drive into the rear Apogee™ utility panel to load available patches
 - Machines currently running **v5** will select the *v5flashTool.bsi*
 - Machines currently running **v6** will select the *v6flashTool.bsi*

FAILURE TO SELECT THE APPROPRIATE PATCH FILE FOR YOUR MACHINE'S CURRENT VERSION WILL RESULT IN A FAILED UPDATE

- Tap to select the correct patch file for your tool and then tap **Apply** to initiate the update.
- When prompted [*Remove USB and Reboot*] remove the thumb drive and cycle power.
- The tool will run through a series of configuration screens. Reboot when => is displayed as the last line.

- The tool will run through another configuration screen. Reboot when => is displayed as the last line.
- Log in to the Apogee™ with Admin credentials.
- Click the **About** tab at the top of the screen.
- Verify that system information reflects the version installed.